
# What is Depth Filtration?

Successfully used in a variety of applications, depth filtration utilises a thick layer of media to effectively trap and retain various particulate. Commonly specified as the first stage of a filtration cascade, more advanced manufacturing techniques have now developed depth cartridges suited to improving downstream filtration.

### **Cross-Section of a Depth Cartridge**

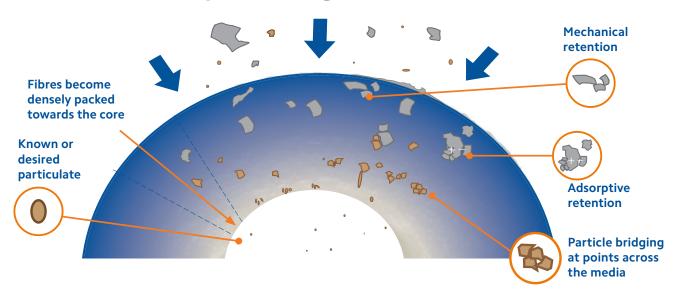

### **How do Depth Filters Work?**

As liquid from the inlet is sent twisting and turning on a tortuous path through the filter cartridge, particles become caught in the densely packed fibres of a depth filter - this sieving or interception is known as mechanical retention. With the introduction of graded-depth filtration, a broad range of particulate can be captured across the entirety of the depth media.

From outside to in, the media fibres become densely packed with larger particulate captured first, allowing smaller particles to be progressively intercepted. As well as the physical interception, fibres also naturally attract particles via Van de Waals force. This adhesion process is known as adsorptive retention.

### **Typical Applications**

Depth filtration offers a myriad of solutions to suit many applications:

- Incoming water
- Pre-RO
- General pre-filtration
- Particulate removal
- High temperatures
- Aggressive solvents
- Food grade compatibility
- High viscosity liquids
- Adhesives
- · Paints and inks

# **Technology Developments**

For over 50 years, string wound cartridges have been used as a basic form of filtration. Development in manufacturing processes and technologies have resulted in more advanced cartridges with improved performance characteristics and capabilities.









### **Spun Bonded Fibres**

Advanced range of solutions for efficient prefiltration or particulate classification

- The most popular option for sediment reduction
- More precise filtration over wound technology
- Particulate is retained throughout the depth of the filter media
- Increased void volume
   (available space for particulate to be retained) maximises dirt holding capacity
- Suitable for applications from batch process to drinking water

### **Wound String Fibres**

Ideal for high temperature and chemical compatibility applications

- Tried and tested technology
- Cost effective particulate filtration
- Multiple options of filter media and core material
- Suitable for high temperature and aggressive chemicals
- Wide micron rating options from 0.5 to 150 micron

### **Specialist Materials**

Ideal for high viscosity and high temperature applications

- Specially designed for more challenging applications
- Technologies applied to overcome high viscosity processes
- Products for superior performance in paint and ink applications
- Cartridges infused with antibacterial additives



# TruDepth® Premier Spun Polypropylene


### 1-50 micron

With higher efficiency and a longer service life than both the Economic and Standard spun, the PSP is the most versatile and adept cartridge in the TruDepth® range. The deep grooved construction significantly increases the surface area, maximising the dirt holding capacity of the cartridge whilst the integral support core increases pressure and temperature operating conditions. Available with a range of end-caps for added seal security and operator ease for fitting in multi-round housings.



## **Key Features**

- Deep-grooved finish for highest surface area and lowest pressure drop
- End-cap options for secure sealing
- A 4mm thick polypropylene core increases strength and temperature performance

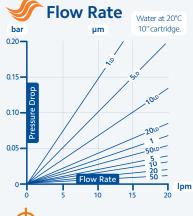

# **Specification**

**Efficiency** 85%

Max. Operating Temperature

Max. Operating Pressure Differential 2.5 bar at 21°C



#### Filter Media

Polypropylene

#### End-cap (Optional)

Polypropylene

#### Core


Polypropylene

#### Seal

Silicone (as standard, when end-caps specified)



#### Micron (µm)

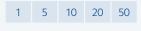

#### Length (")

93/4 97/8	20	30	40
-----------	----	----	----

#### **End-cap**


#### Seal



#### Diameter





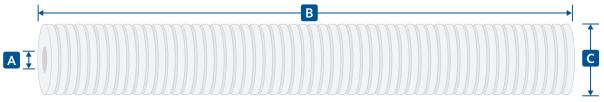

	Dimensions (mm)							
	Α	В					С	
Length (")		Blank	EH/MH	ES/ MS	FH	XK		
97/8	28	250	317	278	322	310	63	
20	28	508	575	536	580	568	63	
30	28	762	829	790	834	822	63	
40	28	1016	1083	1044	1088	1076	63	
9¾LD	30	248	-	-	-	-	115	
20LD	30	508	-	-	-	-	115	

### **Part Number**

Code	Micron	Length	End-cap	Seal	
PSP <b>–</b> 1, 5, 10, 20, 50		9%, 20, 30, 40	Blank		Blank
	.T 1 5 10 20 50 F		EH, ES, FH, MH, MS, XK	S, E, V	
	1,73, 10,20,30	9¾LD, 20LD	Blank	Blank	

e.g. PSP-5-40EHS